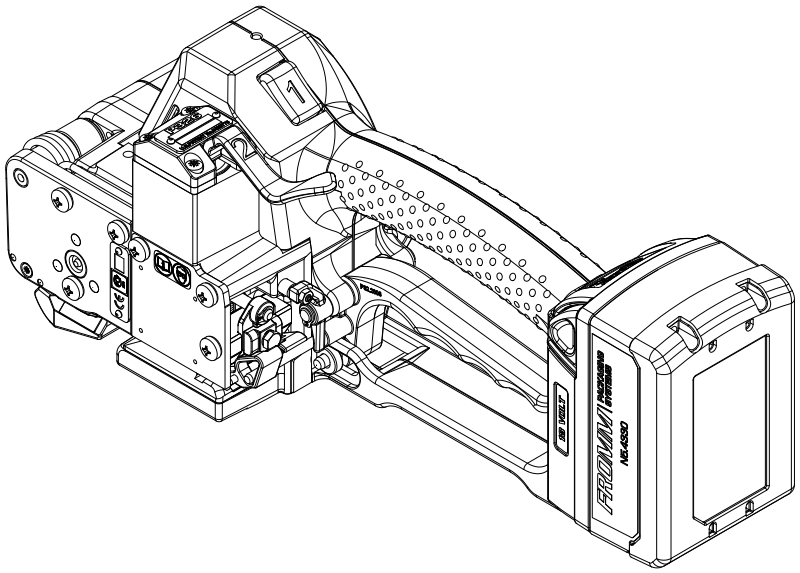
FROMM

SERVICE MANUAL

BATTERY - POWERED PLASTIC STRAPPING TOOL

MODEL P326.0001.01

Manual for authorized dealers and service points



P326.0001.01.sen.fm/MAS/© 02.10

INDEX PAGE

1.5 RECOMMENDED SPARE PARTS 1-15

1.6 ACCESSORY TOOLS 1-16

1.7 USE OF ACCESSORY TOOLS 1-17

1.8 ORDERING SPARE PARTS 1-21
1.8.1 Ordering manuals 1-21
1.8.2 Ordering address. 1-21
1.8.3 Finding out of the tool type (item number), the serial number and the version number:. 1-21

1.9 SERVICE ADDRESS 1-22

1.10 CHART OF TYPES 1-22

1.5 RECOMMENDED SPARE PARTS

Following spare parts are recommended for stock keeping:

Item-No.	Description	Pieces per tool
N1.1305	Screw	2
N1.1904	Screw	5
N1.1909	Flat head screw	2
N1.1927	Flat head screw	2
N1.1929	Screw	1
N1.1934	Flat head screw	3
N1.6503	Safety washer	6
N1.6504	Safety washer	12
N1.6505	Safety washer	3
N1.7206	PT-screw	1
N1.7211	PT-screw	6
N2.1118	Security ring	1
N2.1121	Security ring	5
N2.1606	Spring ring	1
N2.1805	Tensioning ring	1
N3.1702	Ball	6
N3.4509	Free wheeling	2
N3.4520	Free wheeling	1
N51.2194	Insertation part	1
N5.2367	Micro switch	1
N5.2368	Micro switch	1
P32.0153	Body	1
P32.1053*	Welding gripper	1
P32.1203*	Welding stop gripper	1
P32.1204*	Cutter	1
P32.1219/20*	Tensioning wheel	1
P32.1222/25*	Gripper	1
P32.1223/26*	Gripper	1
P32.1224/27*	Gripper	1
P32.1238	End cover	1
P32.2026	Lever	1
P32.2078*	Electric motor	1
P32.2079	Motor housing	1
P32.2080	Motor housing	1
P32.2081	Circuit board	1

* = wearing parts
Stock only parts from tools that are in sale.

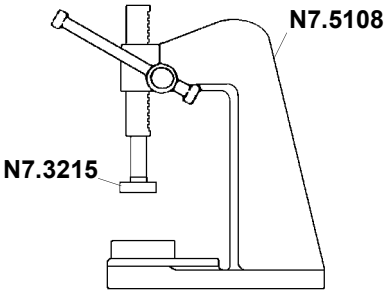
1.6 ACCESSORY TOOLS

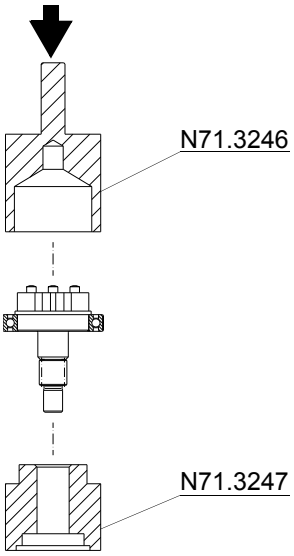
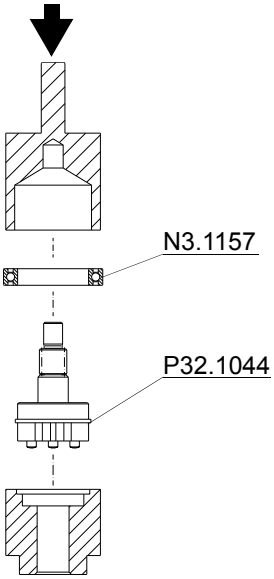
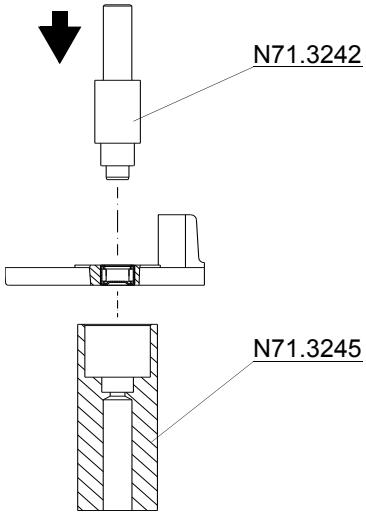
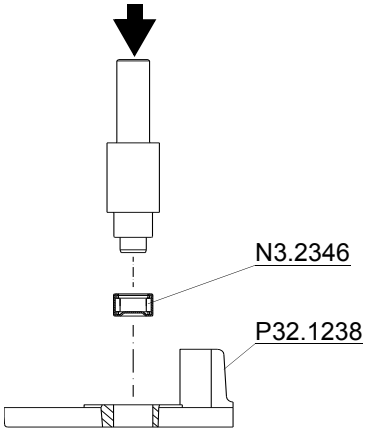
Item number	Description	Application
N71.3235	Press in and press out arbor	N3.4509/P32.2036; N3.4509/P32.2015
N71.3237	Press in and press out arbor	N3.1159/P32.2016
N71.3239	Press in arbor	N3.2347/P32.1024
N71.3240	Press out arbor	N3.2347/P32.1024
N71.3241	Press in and press out pressure pad	N3.2347/P32.1024
N71.3242	Press in and press out arbor	N3.2346/P32.1238
N71.3243	Press in arbor	N3.1134, P32.1023/P32.1022
N71.3244	Press out arbor	N3.1134, P32.1023/P32.1022
N71.3245	Pressure pad	N3.1134, P32.1023/P32.1022; N3.2346/P32.1238
N71.3246	Press in and press out arbor	N3.1157/P32.1044
N71.3247	Press in and press out pressure pad	N3.1157/P32.1044
N71.3248	Press in arbor	N3.3172/P32.2088
N71.3249	Press out pressure pad	N3.3172/P32.2088
N71.3250	Press in and press out arbor	N3.3172/P32.2001; N3.3172/P32.2088
N71.3282	Press in and press out pressure pad	N3.4509/P32.2015; N3.4520/P32.2018; N3.4509/P32.2036
N71.3283	Press in and press out pressure pad	N3.1159/P32.2016
N71.3284	Press out arbor	N3.4520/P32.2018
N71.3285	Press out pressure pad	N3.1137/P32.2015
N71.3286	Press out arbor	N3.1137/P32.2015

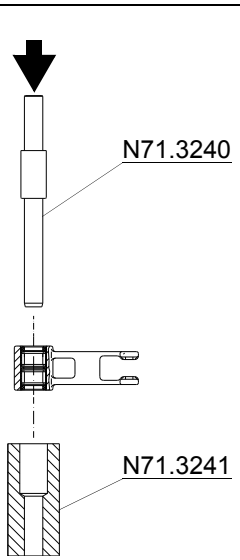
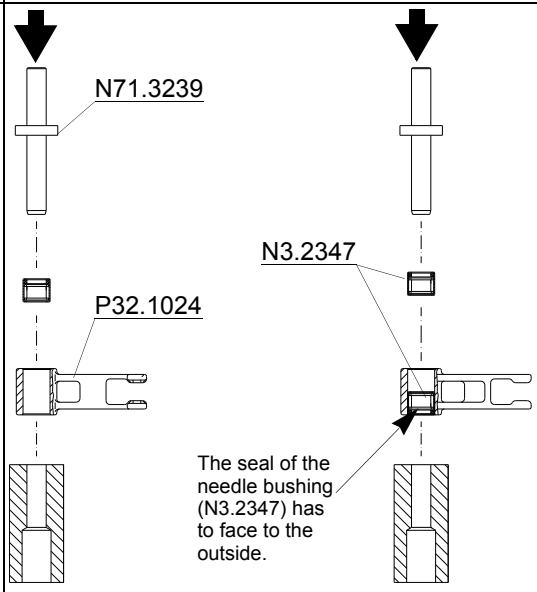
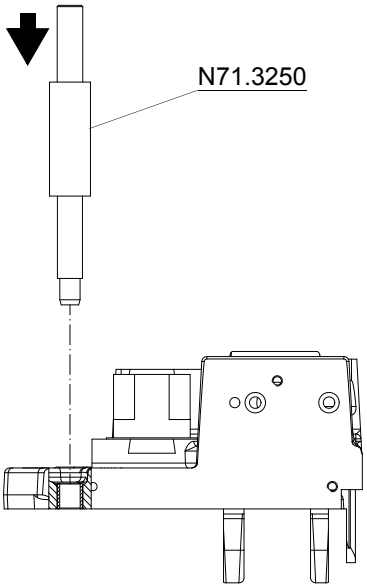
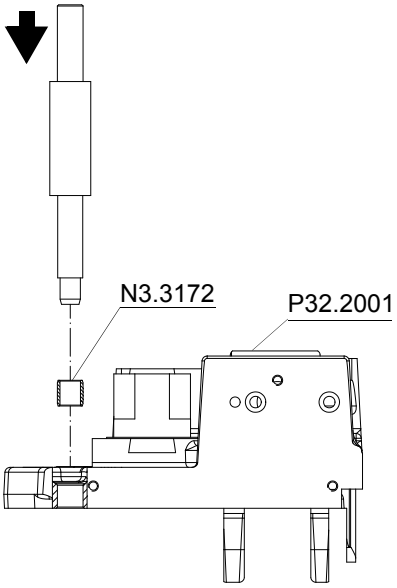
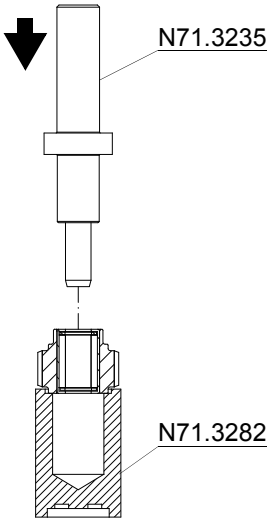
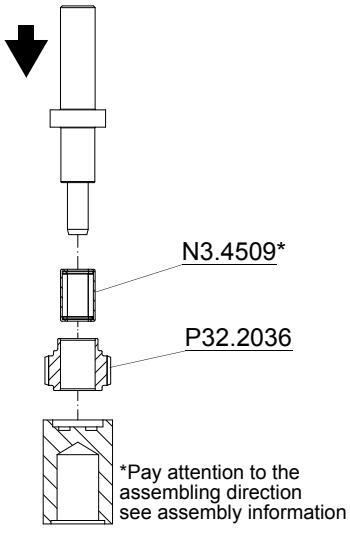
Partly some of these tools are already used for other models.

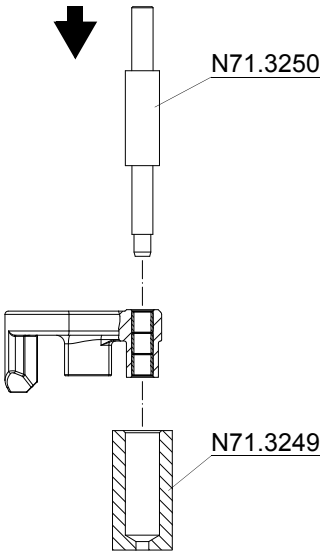
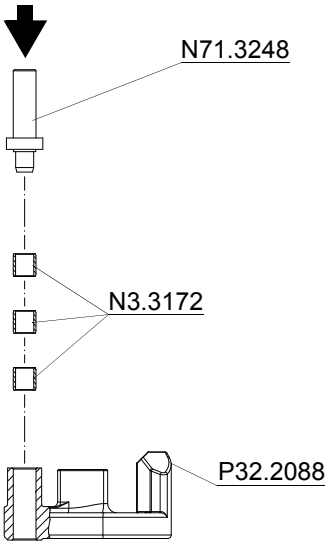
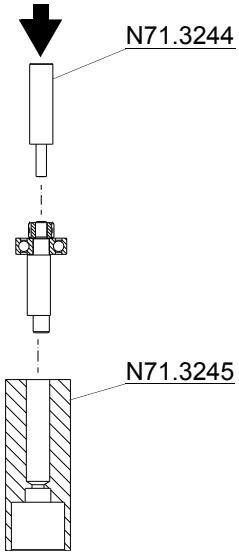
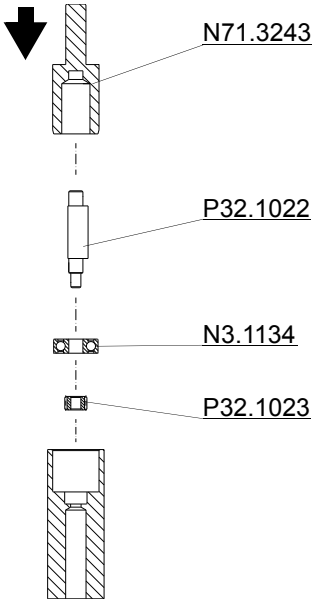
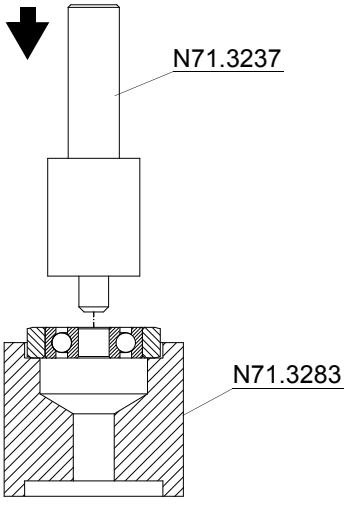
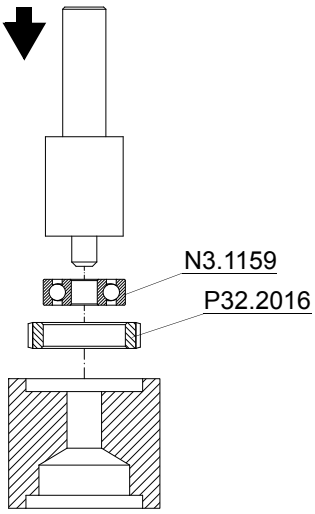
1.7 USE OF ACCESSORY TOOLS

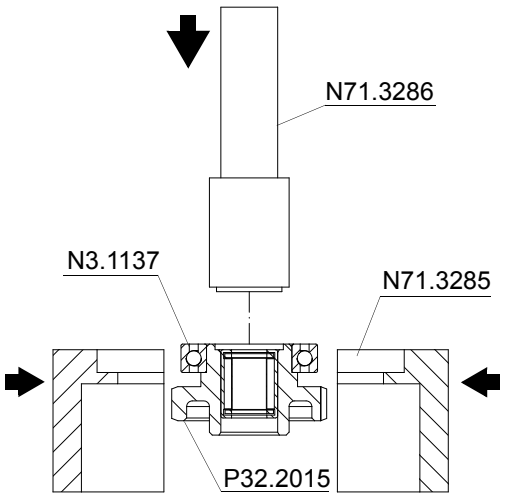
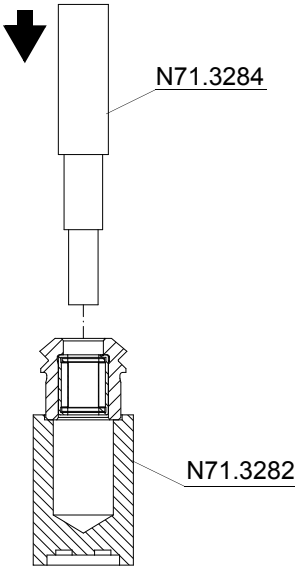
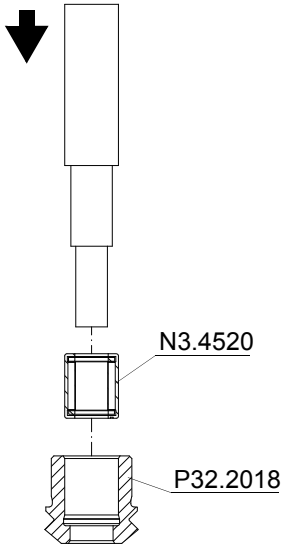
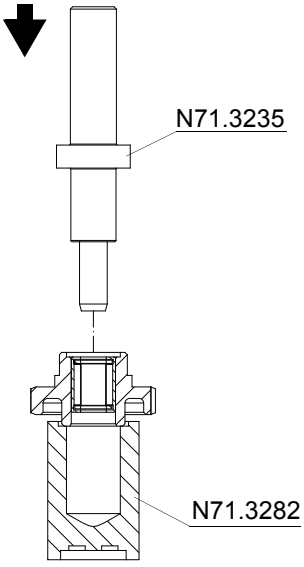
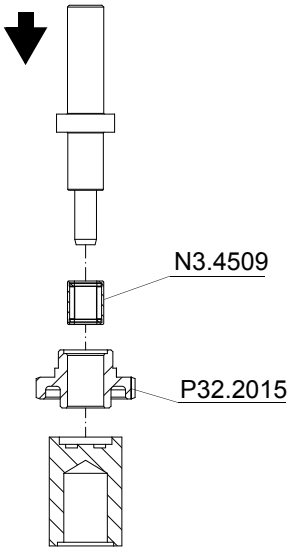
Accessory tools should only be used with the suitable arbor press N7.5108 to prevent a jam of the parts have to be pressed in. Additional a retainer (N7.3215) is necessary.



Part	Disassembly	Assembly
N3.1157/ P32.1044		
N3.2346/ P32.1238		

Part	Disassembly	Assembly
N3.2347/ P32.1024		
N3.3172/ P32.2001		
N3.4509/ P32.2036		

Part	Disassembly	Assembly
N3.3172/ P32.2088		
P32.1023/ N3.1134/ P32.1022		
P32.2016/ N3.1159		

Part	Disassembly	Assembly
P32.2015/ N3.1137		
P32.2018/ N3.4520		
P32.2015/ N3.4509		

1.8 ORDERING SPARE PARTS

On principle spare part numbers should be taken from the drawings or spare parts lists. Check if the version number of the tool and the spare parts list are the same.
Type dependent spare parts should be ordered as follows:

Ordering example

Ordering a tensioning wheel:

- Take item numbers of the tensioning wheel from drawing (P32.1219/20)
- Find out the tool type in which the tensioning wheel should be assembled (e.g. 43.2223)
- Find out the item number of the needed tensioning wheel by using the type dependent spare parts lists (for type 43.2223 it is tensioning wheel P32.1219).

Order as follows if 10 tensioning wheels are needed:
P32.1219 Tensioning wheel 10 pcs.

1.8.1 Ordering manuals

When converting tools make sure that the used manual has still validity.
If tools change their item number because of the conversion (see chart of types) the adequate manual must be ordered as follows.

Ordering example:

Tool item number: 43.2223
Version number: 01
Language of the manual: de

The manual order for this tool must look as follows:
43222301.de
If the manual is needed in another language replace the shorthand expression "de" (see table).

de	**German**
en	**English**
fr	**French**
it	**Italian**
nl	**Dutch**
po	**Portuguese**
se	**Swedish**
fin	**Finnish**
sp	**Spanish**
ru	**Russian**
cz	**Czech**
hu	**Hungarian**
pl	**Polish**
sk	**Slovakian**
tr	**Turkish**

1.8.2 Ordering address

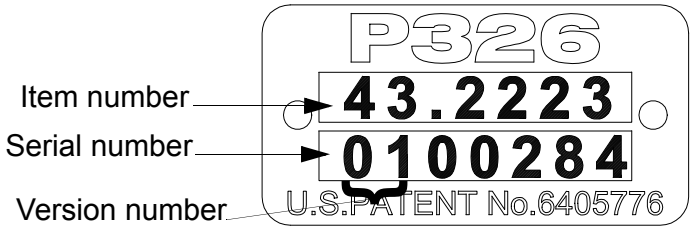
Spare parts and manuals can be ordered at:

Fromm Holding AG
Hinterbergstrasse 26
CH-6330 Cham
Switzerland

Tel.: +41(0) 41 741 57 41
Fax: +41(0) 41 741 57 60
e-mail: orders@fromm-pack.com

1.8.3 Finding out of the tool type (item number), the serial number and the version number:

Type label P326



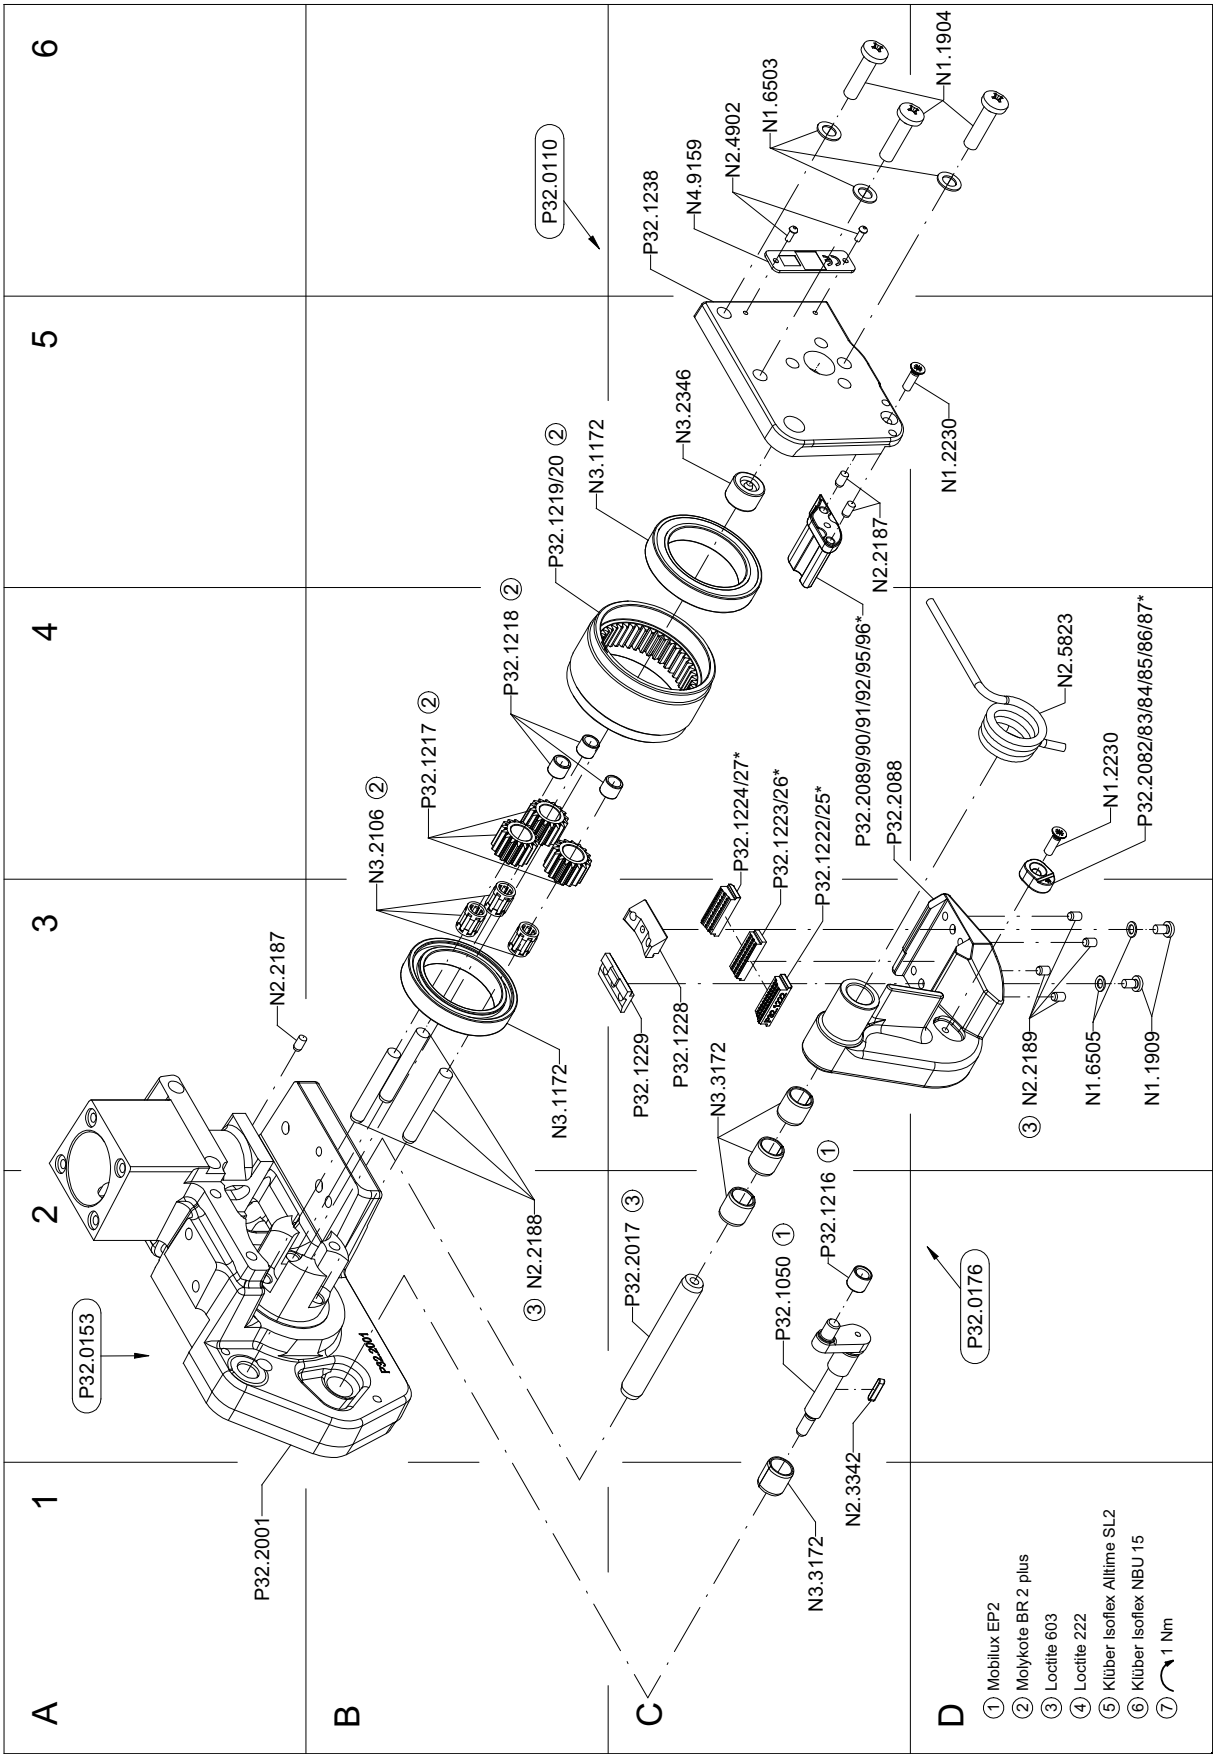
1.9 SERVICE ADDRESS

You will get further assistance and information at:

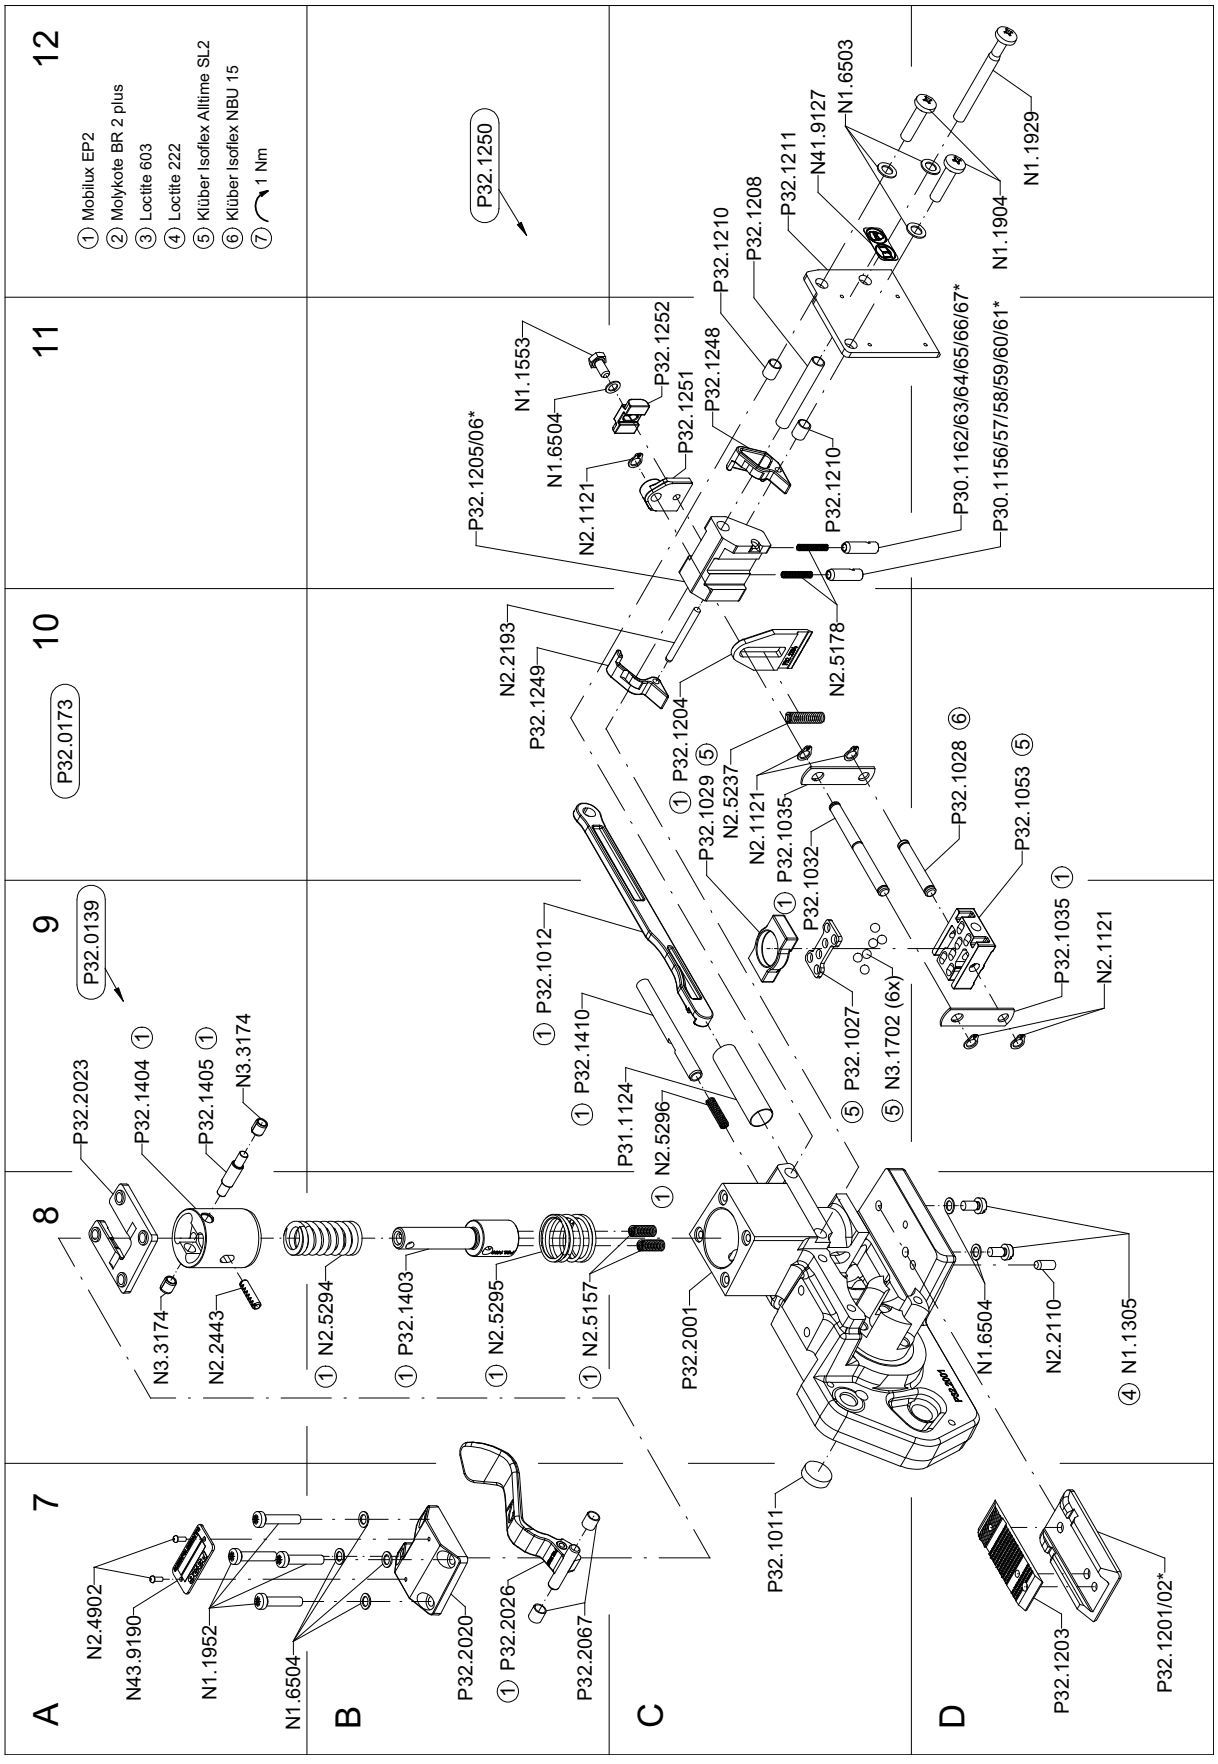
1.10 CHART OF TYPES

Item no.	Model	Strap width	Strap thickness
43.2201	P326/10/0.40-0.64	10 mm / 3/8"	0.40-0.64 mm / .016 - .025"
43.2202	P326/10/0.65-1.05	10 mm / 3/8"	0.65-1.05 mm / .026 - .041"
43.2211	P326/11.1/0.40-0.64	11.1 mm / 7/16"	0.40-0.64 mm / .016 - .025"
43.2212	P326/11.1/0.65-1.05	11.1 mm / 7/16"	0.65-1.05 mm / .026 - .041"
43.2221	P326/12/0.40-0.64	12 mm	0.40-0.64 mm / .016 - .025"
43.2222	P326/12/0.65-1.05	12 mm	0.65-1.05 mm / .026 - .041"
43.2223	P326/12.7/0.40-0.64	12.7 mm / 1/2"	0.40-0.64 mm / .016 - .025"
43.2224	P326/12.7/0.65-1.05	12.7 mm / 1/2"	0.65-1.05 mm / .026 - .041"
43.2231	P326/13/0.40-0.64	13 mm	0.40-0.64 mm / .016 - .025"
43.2232	P326/13/0.65-1.05	13 mm	0.65-1.05 mm / .026 - .041"
43.2251	P326/15/0.40-0.64	15 mm	0.40-0.64 mm / .016 - .025"
43.2252	P326/15/0.65-1.05	15 mm	0.65-1.05 mm / .026 - .041"
43.2253	P326/15.5/0.40-0.64	15.5 mm	0.40-0.64 mm / .016 - .025"
43.2254	P326/15.5/0.65-1.05	15.5 mm	0.65-1.05 mm / .026 - .041"
43.2261	P326/16/0.40-0.64	16 mm / 5/8"	0.40-0.64 mm / .016 - .025"
43.2262	P326/16/0.65-1.05	16 mm / 5/8"	0.65-1.05 mm / .026 - .041"

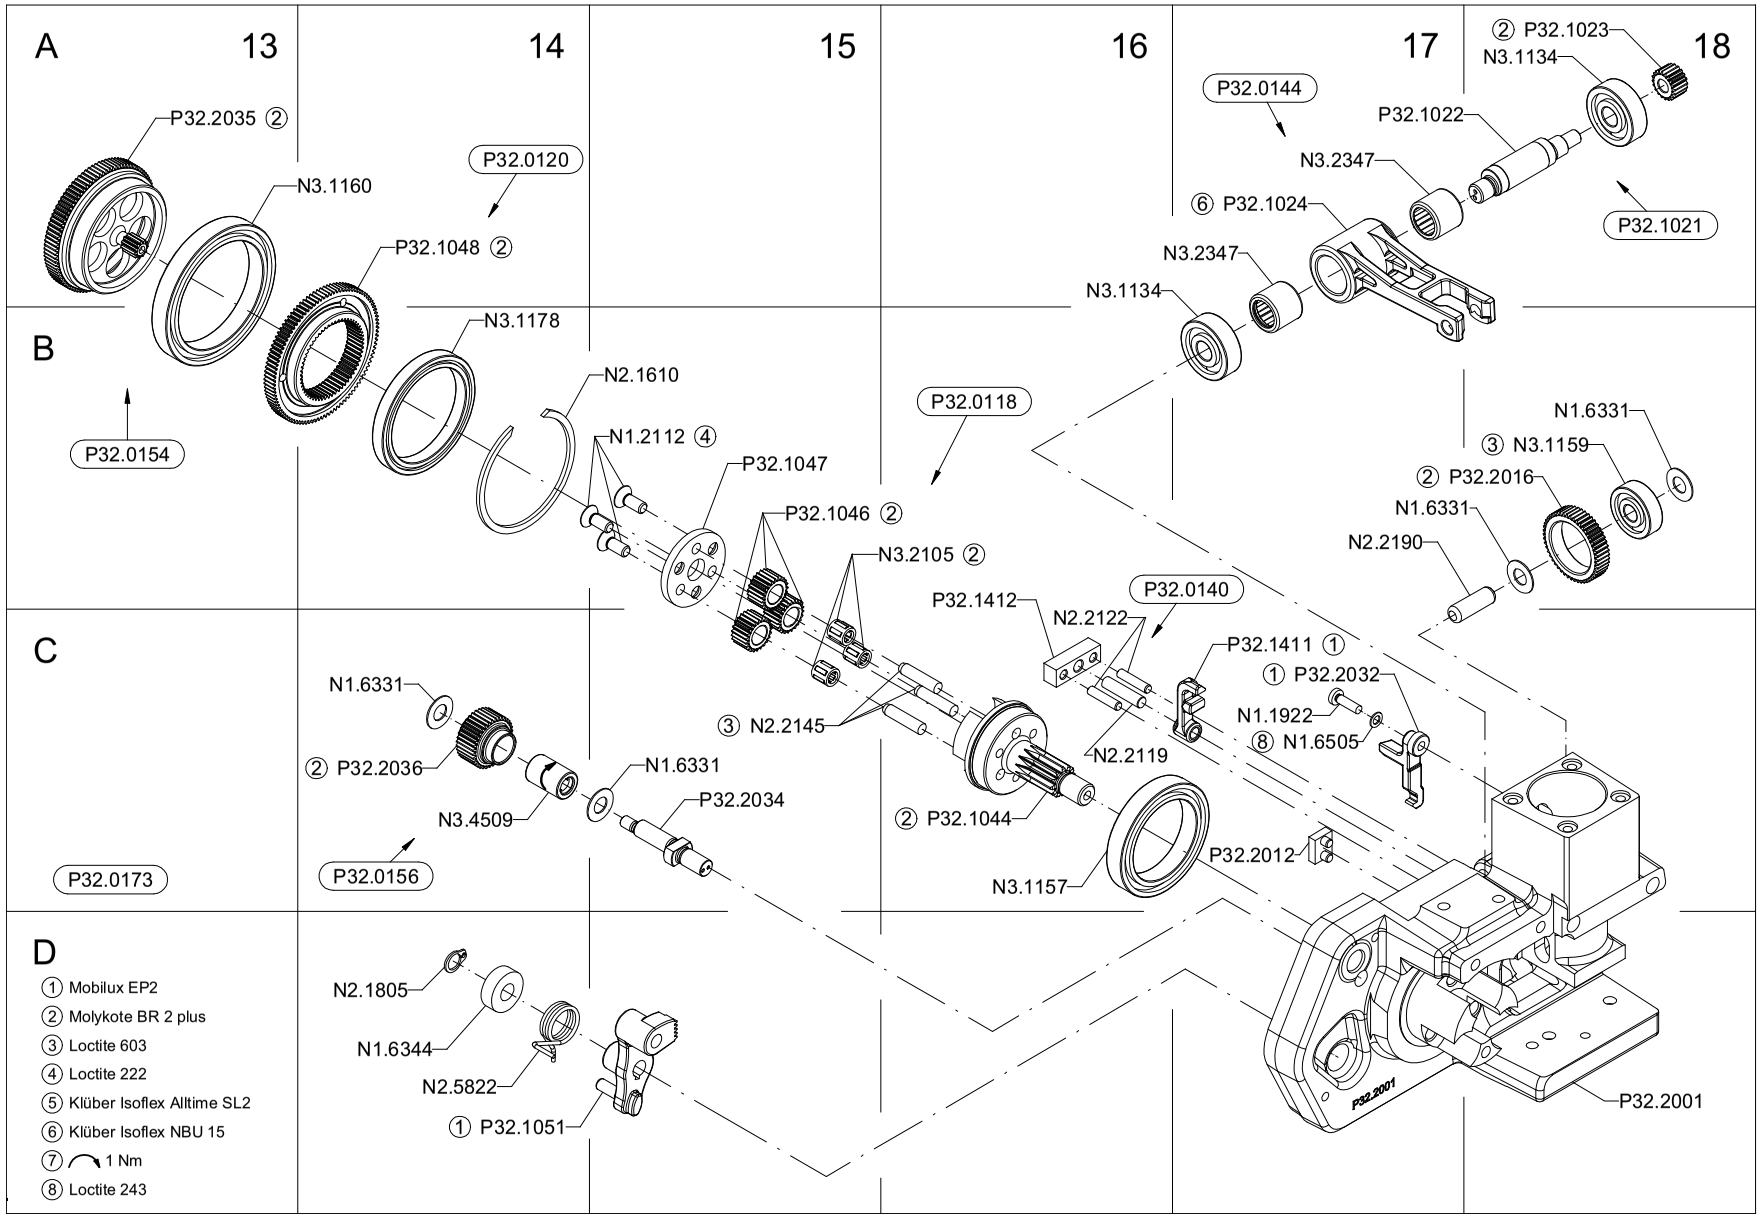
2 DRAWING P326.0001.01

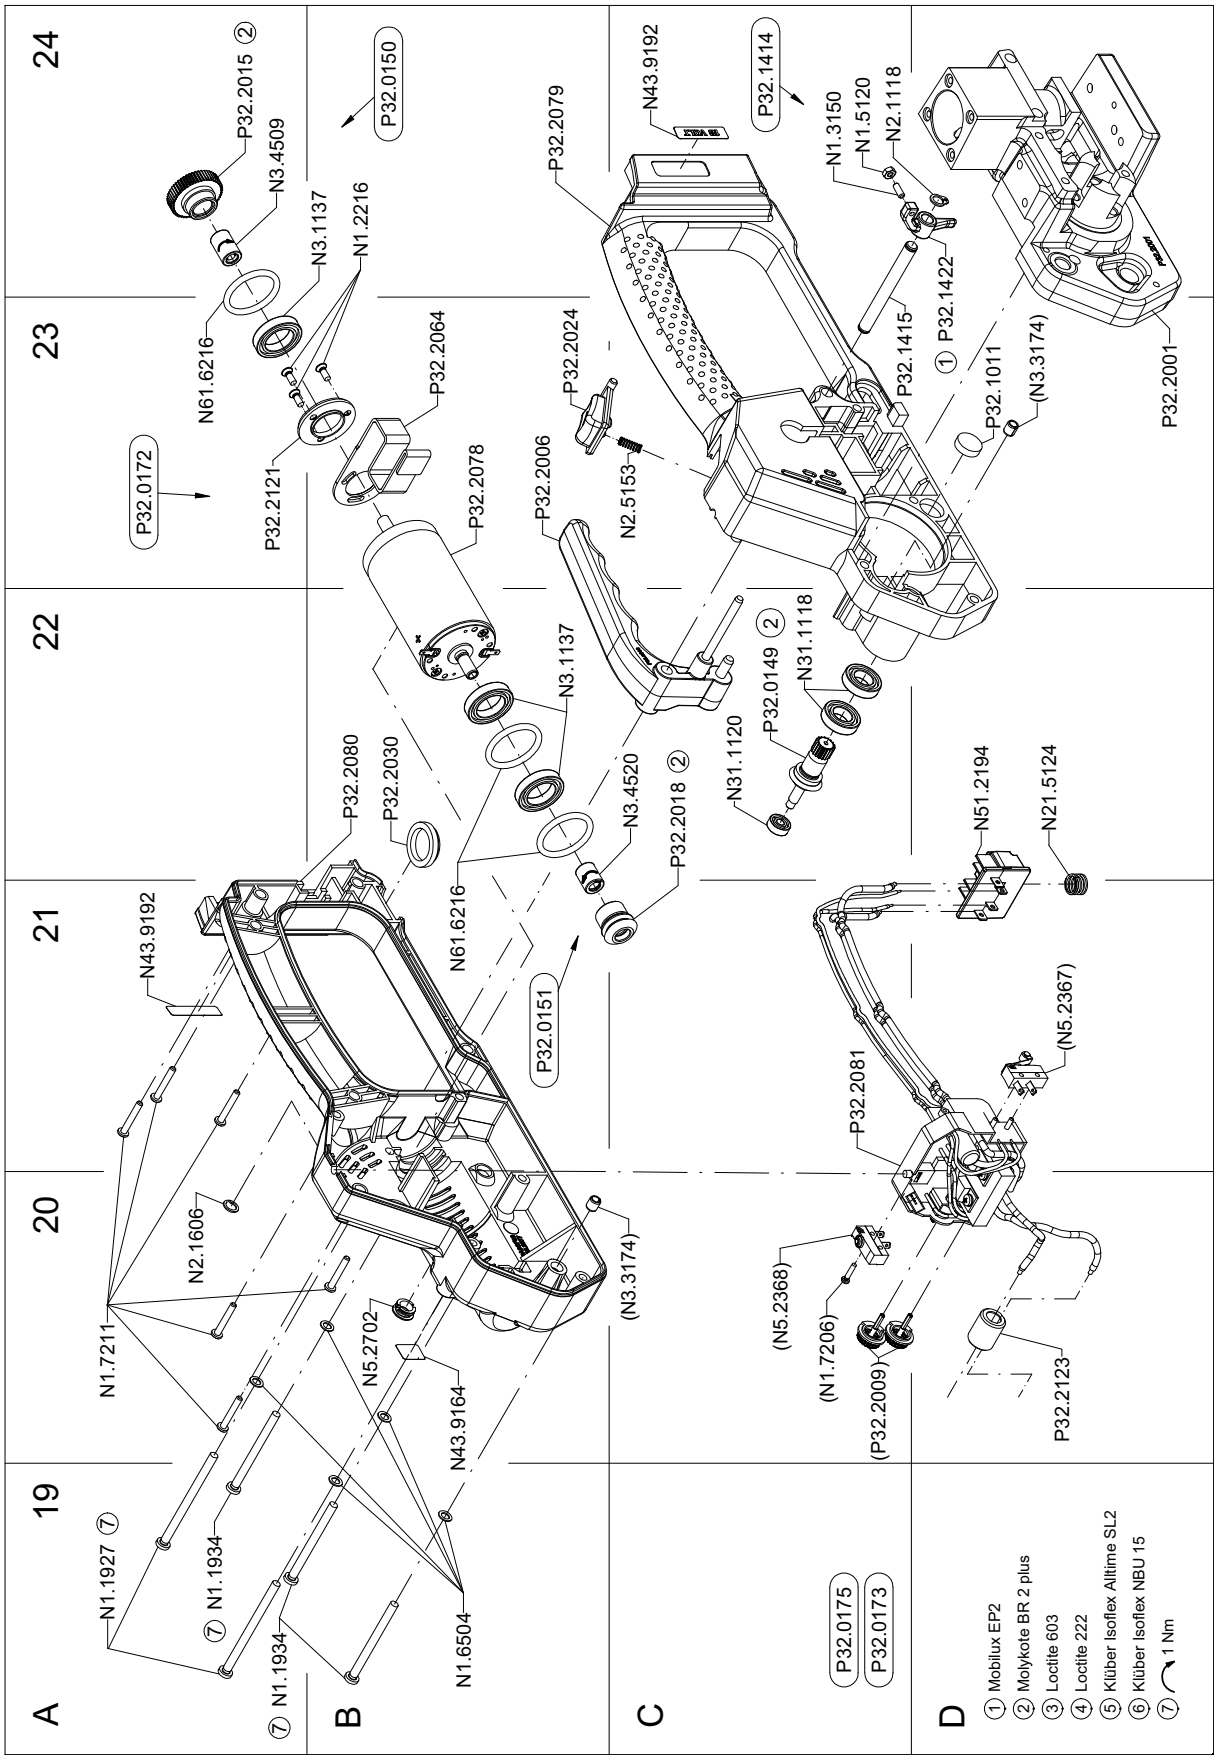


***See 1.8 Ordering spare parts**



***See 1.8 Ordering spare parts**


A
13
14
15
16
17
18
B
C
D
P32.2035 ②
N3.1160
P32.0120
P32.1048 ②
N3.1178
N2.1610
N1.2112 ④
P32.1047
P32.1046 ②
N3.2105 ②
P32.0154
P32.0118
P32.0144
② P32.1023
N3.1134
P32.1022
N3.2347
⑥ P32.1024
P32.1021
N3.2347
N3.1134
N1.6331
③ N3.1159
② P32.2016
N1.6331
N2.2190
P32.0140
P32.1412
N2.2122
P32.1411 ①
① P32.2032
N1.1922
⑧ N1.6505
N2.2119
③ N2.2145
② P32.1044
N3.1157
P32.2012
P32.2001
N1.6331
② P32.2036
N1.6331
N3.4509
P32.2034
P32.0156
P32.0173
N2.1805
N1.6344
N2.5822
① P32.1051
① Mobilux EP2
② Molykote BR 2 plus
③ Loctite 603
④ Loctite 222
⑤ Klüber Isoflex Alltime SL2
⑥ Klüber Isoflex NBU 15
⑦ 1 Nm
⑧ Loctite 243


A
B
C
D
19
20
21
22
23
24
P32.0172
P32.0150
P32.0151
P32.0175
P32.0173
P32.1414
N1.1927 ⑦
⑦ N1.1934
⑦ N1.1934
N1.7211
N2.1606
N5.2702
N43.9164
N1.6504
N43.9192
P32.2080
P32.2030
N61.6216
N3.1137
P32.2078
P32.2064
P32.2121
N61.6216
N3.1137
N1.2216
N3.4509
P32.2015 ②
P32.2006
P32.2024
N2.5153
P32.2079
N43.9192
N3.4520
P32.2018 ②
N31.1120
P32.0149 ②
N31.1118
N1.3150
N1.5120
N2.1118
P32.1422
P32.1415
① P32.1422
P32.1011
(N3.3174)
P32.2001
(N3.3174)
N51.2194
N21.5124
P32.2081
(N5.2367)
(N5.2368)
(N1.7206)
(P32.2009)
P32.2123
① Mobilux EP2
② Molykote BR 2 plus
③ Loctite 603
④ Loctite 222
⑤ Klüber Isoflex Alltime SL2
⑥ Klüber Isoflex NBU 15
⑦ 1 Nm

3 SPARE PARTS LIST P326

3.1 Type independent spare parts P326.0001.01

Item-No.		in group	Pcs.	Description	Dimension	Field
N1.1305			2	SCREW	M4 X 7.8	D8
N1.1553		P32.1250	1	HEXAGON SCREW	M4 X 8	B11
N1.1904			5	SCREW	M5 X 20	D6+
N1.1909			2	FLAT HEAD SCREW	M3 X 5	D3
N1.1922		P32.0173	1	SCREW	M3 X 10	C17
N1.1927		P32.0173	2	FLAT HEAD SCREW	M4 X 60	A19
N1.1929			1	SCREW	M5 X 50	D12
N1.1934		P32.0173	3	FLAT HEAD SCREW	M4 X 50	A19
N1.1952		P32.0173	4	FLAT HEAD SCREW	M4 X 20	A7
N1.2112		P32.0118	3	COUNTERSUNK SCREW	M4 X 10	B15
N1.2216		P32.0172	3	COUNTERSUNK SCREW	M3 X 8	B24
N1.2230			2	COUNTERSUNK SCREW	M3 X 10	D4+
N1.3150		P32.1414	1	SOCKET SET SCREW	M3 X 8	C24
N1.5120		P32.1414	1	HEXAGON NUT	M3	C24
N1.6331		P32.0173	4	SPACER WASHER	6 X 12 X 0.5	C14+
N1.6344		P32.0173	1	SPACER PIECE	6.3 X 15 X 5	D14
N1.6503			6	SAFETY WASHER	M5	C6+
N1.6504			2	SAFETY WASHER	M4	D8
N1.6504		P32.0173	9	SAFETY WASHER	M4	A7+
N1.6504		P32.1250	1	SAFETY WASHER	M4	B11
N1.6505			2	SAFETY WASHER	M3	D3
N1.6505		P32.0173	1	SAFETY WASHER	M3	C17
N1.7206		P32.2081	1	PT-SCREW	2.2 X 10	C20
N1.7211		P32.0175	6	PT-SCREW	3 X 20	A20
N21.5124		P32.0175	1	PRESSURE SPRING	0.9 X 10 X 15/5.5	D22
N2.1118		P32.0175	1	SECURITY RING	6	C24
N2.1121			1	SECURITY RING	5	B11
N2.1121		P32.0173	4	SECURITY RING	5	D9+
N2.1606		P32.0175	1	SPRING RING	SW6	A20
N2.1610		P32.0173	1	SPRING RING	SB44	B15
N2.1805		P32.0173	1	TENSIONING RING	6	D14
N2.2110		P32.0153	1	PARALLEL PIN	4 m6 X 10	D8
N2.2119		P32.0140	1	PARALLEL PIN	4 m6 X 18	C16
N2.2122		P32.0140	2	PARALLEL PIN	3 h6 X 14	C16
N2.2145		P32.0118	3	PARALLEL PIN	4 h6 X 18	C15
N2.2187		P32.0110	2	PARALLEL PIN	3 m6 X 6	C5
N2.2187		P32.0153	1	PARALLEL PIN	3 m6 X 6	A3
N2.2188		P32.0153	3	PARALLEL PIN	5 h6 X 34	B2
N2.2189		P32.0176	4	PARALLEL PIN	3 m6 X 5	D3
N2.2190		P32.0173	1	PARALLEL PIN	6 h6 X 18	B17
N2.2193			1	PARALLEL PIN	3 m6 X 32	B10
N2.2443		P32.0139	1	DOWEL PIN	4 X 15	A8
N2.3342		P32.0173	1	FEATHER KEY	2 X 2 X 10	C1
N2.4902			4	HAMMER HEAD BOLT	1.85 X 4.76	C6+
N2.5153		P32.0175	1	PRESSURE SPRING	0.4 X 4.1 X 16/10.5	C23
N2.5157		P32.0173	2	PRESSURE SPRING	0.6 X 4.8 X 20/15.5	B8
N2.5178			2	PRESSURE SPRING	0.32 X 2.82 X 20.5/ 20.5	C10
N2.5237			1	PRESSURE SPRING	0.8 X 4.8 X 25/18.5	C10
N2.5294		P32.0139	1	PRESSURE SPRING	2.5 X 15 X 46.5/9.5	B8

[ ] = Group * = Wearing parts

Item-No.		in group	Pcs.	Description	Dimension	Field
N2.5295		P32.0173	1	PRESSURE SPRING	1.5 X 21 X 27/5.5	B8
N2.5296		P32.0173	1	PRESSURE SPRING	0.5 X 4 X 24/16.5	C9
N2.5822		P32.0173	1	TORSION SPRING	1.25 X 12/3.75	D14
N2.5823			1	TORSION SPRING	2.8 X 17/4	D4
N31.1118		P32.0175	2	BALL BEARING	10 X 19 X 5	C22
N31.1120		P32.0175	1	BALL BEARING	4 X 11 X 4	C22
N3.1134		P32.0173	1	BALL BEARING	7 X 22 X 7	A16
N3.1134		P32.1021	1	BALL BEARING	7 X 22 X 7	A18
N3.1137		P32.0150	1	BALL BEARING	15 X 24 X 5	B24
N3.1137		P32.0175	2	BALL BEARING	15 X 24 X 5	B22
N3.1157		P32.0118	1	BALL BEARING	30 X 42 X 7	C16
N3.1159		P32.0173	1	BALL BEARING	6 X 19 X 6	B18
N3.1160		P32.0154	1	BALL BEARING	40 X 52 X 7	A14
N3.1172			2	BALL BEARING	30 X 42 X 7	B3+
N3.1178		P32.0120	1	BALL BEARING	35 X 44 X 5	B14
N3.1702		P32.0173	6	BALL	4 MM	C9
N3.2105		P32.0118	3	NEEDLE CAGE	K 4 X 7 X 7 TN	B16
N3.2106			3	NEEDLE CAGE	K 5 X 8 X 10 TN	B4
N3.2346		P32.0110	1	NEEDLE CASE	8 X 12 X 8	C5
N3.2347		P32.0144	2	NEEDLE BUSH	10 X 14 X 12	A17
N3.3172		P32.0153	1	SLIDE-BEARING	8 X 10 X 10	C1
N3.3172		P32.0176	3	SLIDE-BEARING	8 X 10 X 10	C3
N3.3174		P32.0139	2	SLIDE-BEARING	4 X 5.5 X 6	A8+
N3.3174		P32.2079	1	SLIDE-BEARING	4 X 5.5 X 6	D23
N3.3174		P32.2080	1	SLIDE-BEARING	4 X 5.5 X 6	C20
N3.4509		P32.0150	1	NEEDLE FREE WHEELING	6 X 10 X 15	A24
N3.4509		P32.0156	1	NEEDLE FREE WHEELING	6 X 10 X 15	C14
N3.4520		P32.0151	1	FREE-WHEELING	6 X 10 X 12	C22
N41.9127			1	ADHESIVE LABEL	20 X 10 X 0.1	C12
N43.9164			1	ADHESIVE LABEL	WEEE	B20
N43.9190			1	TYPE PLATE	<<P326>>	A7
N43.9192		P32.0175	2	ADHESIVE LABEL	18 Volt	A21+
N4.9159			1	LABEL	<<CE>>	C6
N51.2194		P32.0175	1	INSERTATION PART		D22
N5.2367		P32.2081	1	MICRO SWITCH		D21
N5.2368		P32.2081	1	MICRO SWITCH		C20
N5.2702			1	COVER		B20
N61.6216		P32.0175	3	O-RING	23.5 X 3	B21+
P31.1124		P32.0153	1	TUBE		C9
[P32.0110]			1	END COVER		B6
[P32.0118]		P32.0173	1	IDLER STEP		B16
[P32.0120]		P32.0173	1	WHEEL		A14
[P32.0139]		P32.0173	1	SPRING PACKAGE		A9
[P32.0140]		P32.0173	1	INSERTATION PART		B17
[P32.0144]		P32.0173	1	ROCKER		A17
[P32.0149]		P32.0175	1	PINION		C22
[P32.0150]		P32.0175	1	GEAR WHEEL		B24
[P32.0151]		P32.0175	1	CONICAL GEAR WHEEL		B21
[P32.0153]		P32.0173	1	BODY		A2
[P32.0154]		P32.0173	1	GEAR WHEEL		B13
[P32.0156]		P32.0173	1	GEAR WHEEL		C14
[P32.0172]		P32.0175	1	MOTOR		A23
[P32.0173]			1	BASE MODEL		A10+
[P32.0175]		P32.0173	1	DRIVE		C19

[ ] = Group * = Wearing parts

Item-No.		in group	Pcs.	Description	Dimension	Field
[P32.0176]			1	TENSIONING BODY		D2
P32.1011		P32.0173	1	FELT		C7
P32.1011		P32.0175	1	FELT		D23
P32.1012		P32.0173	1	COUPLER		B9
[P32.1021]		P32.0173	1	WELDING EXCENTRIC		A18
P32.1022		P32.1021	1	WELDING EXCENTRIC		A17
P32.1023		P32.1021	1	PINION		A18
P32.1024		P32.0144	1	ROCKER		A17
P32.1027		P32.0173	1	BALL CAGE		C9
P32.1028		P32.0173	1	BOLT		D10
P32.1029		P32.0173	1	THRUST PIECE		C10
P32.1032		P32.0173	1	DRIVING PIN		C9
P32.1035		P32.0173	2	DRIVER		D9+
P32.1044		P32.0118	1	PLANET SHAFT		C16
P32.1046		P32.0118	3	IDLER GEAR		B15
P32.1047		P32.0118	1	COVER		B15
P32.1048		P32.0120	1	WHEEL		A14
P32.1050		P32.0173	1	FRONT TOGGLE LINK		C2
P32.1051		P32.0173	1	LEVER		D14
P32.1053	*	P32.0173	1	WELDING GRIPPER		D10
P32.1203	*		1	WELDING STOP GRIPPER		D7
P32.1204	*		1	CUTTER		C10
P32.1208			1	CENTERING SLEEVE		C12
P32.1210			2	CENTERING SLEEVE		C11+
P32.1211			1	COVER		C12
P32.1216			1	PRESSURE ROLLER		C2
P32.1217			3	IDLER GEAR		B4
P32.1218			3	DOWEL		B4
P32.1228			1	HOLDER		C3
P32.1229			1	HOLDER		C3
P32.1238		P32.0110	1	END COVER		C6
P32.1248			1	SEESAW LEVER		C11
P32.1249			1	SEESAW LEVER		B10
[P32.1250]			1	COUPLER		B12
P32.1251		P32.1250	1	COUPLER		C11
P32.1252		P32.1250	1	THRUST PIECE		C11
P32.1403		P32.0139	1	SPRING BOLT		B8
P32.1404		P32.0139	1	SPRING SLIDE		A9
P32.1405		P32.0139	1	ROLLER		A9
P32.1410		P32.0173	1	COUPLER		B9
P32.1411		P32.0173	1	LEVER		C17
P32.1412		P32.0140	1	INSERTATION PART		B16
[P32.1414]		P32.0175	1	LEVER		C24
P32.1415		P32.0175	1	HANDLE SHAFT		C23
P32.1422		P32.1414	1	LEVER		D24
P32.2001		P32.0153	1	BODY		A1+
[P32.2006]		P32.0175	1	HANDLE LEVER		B23
P32.2009		P32.2081	2	TURNING BUTTON		C20
P32.2012		P32.0173	1	GUIDE		C17
P32.2015		P32.0150	1	GEAR WHEEL		A24
P32.2016		P32.0173	1	GEAR WHEEL		B18
P32.2017		P32.0153	1	SWIVEL SHAFT		C2
P32.2018		P32.0151	1	CONICAL GEAR WHEEL		C22
P32.2020		P32.0173	1	COVER		B7

[ ] = Group * = Wearing parts

Item-No.		in group	Pcs.	Description	Dimension	Field
P32.2023		P32.0173	1	FIXING PLATE		A9
P32.2024		P32.0175	1	PRESSURE BUTTON		B23
[P32.2026]		P32.0173	1	LEVER		B7
P32.2030		P32.0175	1	DISK		B22
P32.2032		P32.0173	1	HOOK		C17
P32.2034		P32.0173	1	SHAFT		C15
P32.2035		P32.0154	1	GEAR WHEEL		A13
P32.2036		P32.0156	1	GEAR WHEEL		C14
P32.2064		P32.0172	1	COOLING PLATE		B23
P32.2067		P32.0173	2	CENTERING SLEEVE		B7
[P32.2078]	*	P32.0172	1	ELECTRIC MOTOR		B23
[P32.2079]		P32.0175	1	MOTOR HOUSING		B24
[P32.2080]		P32.0175	1	MOTOR HOUSING		B22
[P32.2081]		P32.0175	1	CIRCUIT BOARD		C21
P32.2088		P32.0176	1	TENSIONING BODY		C4
P32.2121		P32.0172	1	DISK		A23
[P32.2123]		P32.0175	1	DOWEL		D20

[ ] = Group * = Wearing parts

3.2 Type dependent spare parts P326.0001.01

Type 43.2201.01

43.2201.01	P326/10/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1156			1	GUIDE PIN		D11
P30.1162			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1205			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2082			1	STRAP STOP		D4
P32.2089			1	STRAP GUIDE		C4

Type 43.2202.01

43.2202.01	P326/10/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1156			1	GUIDE PIN		D11
P30.1162			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1205			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2082			1	STRAP STOP		D4
P32.2089			1	STRAP GUIDE		C4

Type 43.2211.01

43.2211.01	P326/11.1/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1158			1	GUIDE PIN		D11
P30.1164			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1205			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2083			1	STRAP STOP		D4
P32.2090			1	STRAP GUIDE		C4

[ ] = Group * = Wearing parts

Type 43.2212.01

43.2212.01	P326/11.1/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1158			1	GUIDE PIN		D11
P30.1164			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1205			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2083			1	STRAP STOP		D4
P32.2090			1	STRAP GUIDE		C4

Type 43.2221.01

43.2221.01	P326/12/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1156			1	GUIDE PIN		D11
P30.1162			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2084			1	STRAP STOP		D4
P32.2091			1	STRAP GUIDE		C4

Type 43.2222.01

43.2222.01	P326/12/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1156			1	GUIDE PIN		D11
P30.1162			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2084			1	STRAP STOP		D4
P32.2091			1	STRAP GUIDE		C4

[ ] = Group * = Wearing parts

Type 43.2223.01

43.2223.01	P326/12.7/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1157			1	GUIDE PIN		D11
P30.1163			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2085			1	STRAP STOP		D4
P32.2095			1	STRAP GUIDE		C4

Type 43.2224.01

43.2224.01	P326/12.7/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1157			1	GUIDE PIN		D11
P30.1163			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2085			1	STRAP STOP		D4
P32.2095			1	STRAP GUIDE		C4

Type 43.2231.01

43.2231.01	P326/13/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1158			1	GUIDE PIN		D11
P30.1164			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2085			1	STRAP STOP		D4
P32.2095			1	STRAP GUIDE		C4

[ ] = Group * = Wearing parts

Type 43.2232.01

43.2232.01	P326/13/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1158			1	GUIDE PIN		D11
P30.1164			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2085			1	STRAP STOP		D4
P32.2095			1	STRAP GUIDE		C4

Type 43.2251.01

43.2251.01	P326/15/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1159			1	GUIDE PIN		D11
P30.1165			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2086			1	STRAP STOP		D4
P32.2092			1	STRAP GUIDE		C4

Type 43.2252.01

43.2252.01	P326/15/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1159			1	GUIDE PIN		D11
P30.1165			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2086			1	STRAP STOP		D4
P32.2092			1	STRAP GUIDE		C4

[ ] = Group * = Wearing parts

Type 43.2253.01

43.2253.01	P326/15.5/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1160			1	GUIDE PIN		D11
P30.1166			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2087			1	STRAP STOP		D4
P32.2096			1	STRAP GUIDE		C4

Type 43.2254.01

43.2254.01	P326/15.5/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1160			1	GUIDE PIN		D11
P30.1166			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2087			1	STRAP STOP		D4
P32.2096			1	STRAP GUIDE		C4

Type 43.2261.01

43.2261.01	P326/16/0.40-0.64			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1161			1	GUIDE PIN		D11
P30.1167			1	GUIDE PIN		D11
P32.1201			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1219	*		1	TENSIONING WHEEL		B5
P32.1222	*		1	GRIPPER		C4
P32.1223	*		1	GRIPPER		C4
P32.1224	*		1	GRIPPER		C4
P32.2087			1	STRAP STOP		D4
P32.2096			1	STRAP GUIDE		C4

[ ] = Group * = Wearing parts

Type 43.2262.01

43.2262.01	P326/16/0.65-1.05			P326.0001.01		26.01.10
Item-No.		in group	Pcs.	Description	Dimension	Field
P30.1161			1	GUIDE PIN		D11
P30.1167			1	GUIDE PIN		D11
P32.1202			1	STEEL INSERT		D7
P32.1206			1	GUIDE CASE		B11
P32.1220	*		1	TENSIONING WHEEL		B5
P32.1225	*		1	GRIPPER		C4
P32.1226	*		1	GRIPPER		C4
P32.1227	*		1	GRIPPER		C4
P32.2087			1	STRAP STOP		D4
P32.2096			1	STRAP GUIDE		C4

[ ] = Group * = Wearing parts